




## 1. IDEAL PLACEMENT

First Reflection Points (FRPs) are the optimal, recommended placement for your panels. Find each FRP by sitting in your listening position while a friend slides a mirror flat against the wall until you can see your speaker. Repeat for each speaker on each of the side and rear walls and ceiling (i.e. 2 FRPs per wall for stereo speakers).

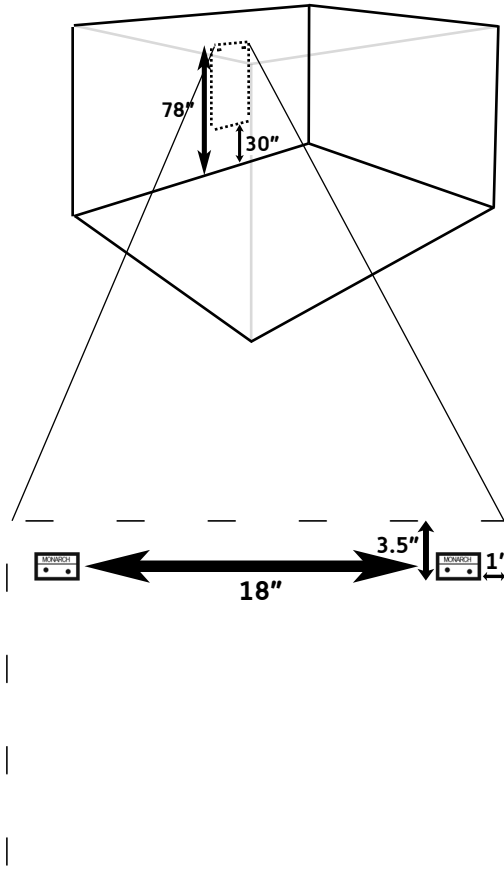



## 2. MEASURE ON WALL

Standard panel placement height will cover the area from 30" to 78" above the floor. The bottom of the clip will sit 3.5" below the top, and 1" from the side, of the eventual placement area. Hold the clip in place to mark the holes, then drill, add drywall plugs, and screw the clip onto the wall.

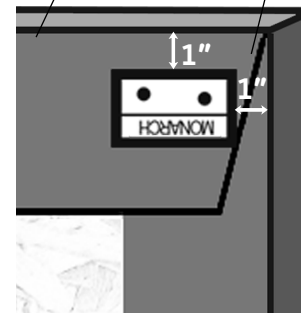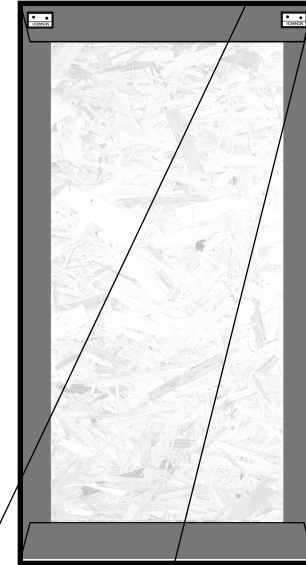

## 3. CLIPS ON PANEL

On the back of the panel, place the clip 1" from the top and 1" from the side. Screw the clips on with the panel screws.

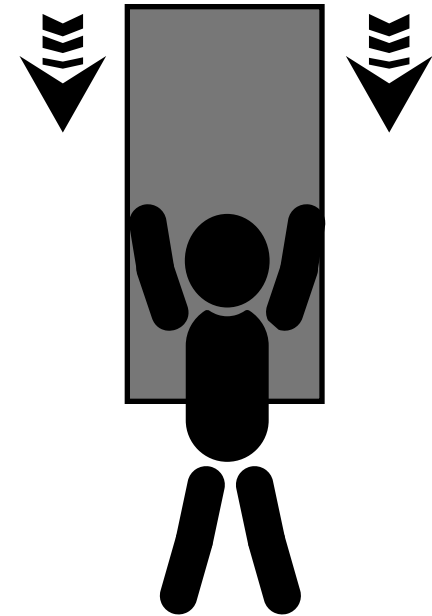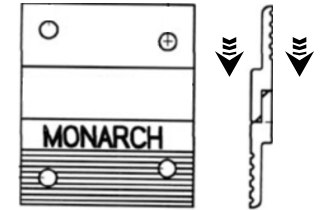

## 4. PLACE PANEL

Drop into place and apply suitable pressure to ensure it is fully in place.

Enjoy clean sound!